

## SAITEK

### COMPETITION PRO GAME CLOCK

#### USER INSTRUCTIONS



#### Operation

Place next to board with Black's button 'up' – pressing it starts White's clock to start the game

Turn on by pushing switch on underside right all the way down to ensure sound and lights are off

Use toggle (front left) to set mode (left – right – up – down)

Press 'pause' (front right) once to stop clocks for any matter requiring an arbiter to attend

Hold 'pause' down for a few seconds to reset

PLEASE TURN OFF AFTER USE!

#### Frequently used presets

##### Blitz

2A	5 minutes each
2B (looks like 28)	15 minutes each
2D (looks like 20)	30 minutes each
7C	20 minutes plus 10 seconds increment each ('Fischer' alternative to 2D above)

##### Long Play

7A	1 hour 35 minutes each (Official NCCA league/cup timing)
7B	1 hour 25 minutes plus 10 seconds increment each (Official NCCA 'Fischer' alternative to 7A above)